

NO	PARTS LIST	NO	PARTS LIST
1	FRAME	19	MAIN SPINDLE
2	DRAG KNOB	20	MAIN SPINDLE INSERT
3	DRAG KNOB INSERT	21	LOCKING O-RING
4	DRAG KNOB SCREW	22	MAIN SPINDLE RETAINER
5	COMPRESSION O-RING	23	SPINDLE HOLDER SCREW
6	PUSH PLATE	24	SPOOL RETAINER
7	CLICKER(D/KNOB)	25	SPINDLE O-RING
8	CLICKER SPRING	26	CLUTCH BEARING
9	DOWEL PIN	27	FOOT
10	MAIN SHAFT NUT	28	FOOT SCREW
11	PRESSURE PLATE	29	SPOOL
12	DRAG WASHER	30	HANDLE SHAFT
13	DRAG DISK	31	HANDLE KNOB
14	DRAG DISK BUSH	32	HANDLE WASHER
15	CLICKER (SPINDLE)	33	HANDLE SCREW
16	CLICKER SPRING(S)	34	BALANCE
17	SLIDE WASHER	35	BALANCE SCREW
18	MAIN SHAFT		

Changing from left hand retrieve to right hand retrieve.

1. Remove the spool retainer cap (24).
2. With a crosspoint screwdriver remove the screw (23) and the main spindle retainer (22).
3. Pull out the (19) main spindle.
4. On the main shaft is a one way bearing (26). Pull this bearing out, turn it over and put it back again.
5. Put the (19) main spindle on again.
6. Place the main spindle retainer (22) on the shaft end and secure it with the screw (23). **Make sure that the cams on the backside of the main spindle retainer engage the slots in the main shaft (18).**
7. Put back on the spool retainer cap (24).

Reel maintenance


Rinse the reel after saltwater use.

Keep the reel clean.

Add waterproof grease/oil to your reel's moving parts (especially to the one way bearing, part 26) once a year.



DEEP 56 | DEEP 78
OWNERS MANUAL

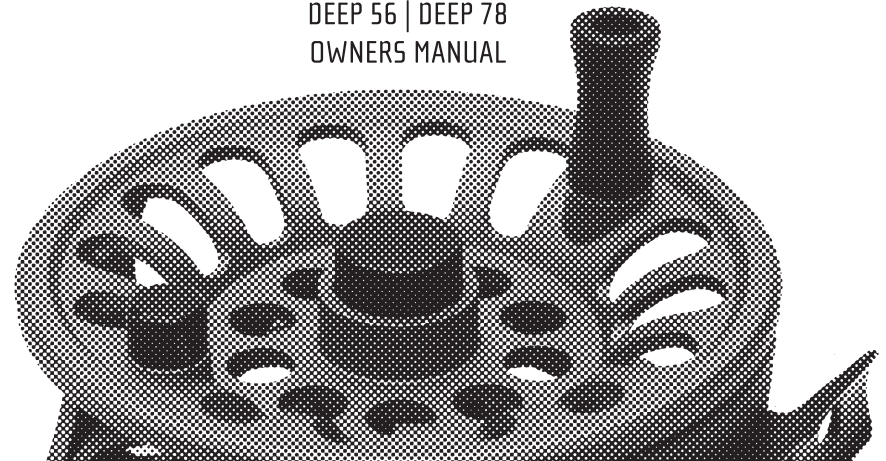

Vision Group Ltd
Niinistökatu 1
05800 Hyvinkää
Finland

service@visiongroup.fi

For service centers visit:
www.visionflyfishing.com