

NO	PARTS LIST	NO	PARTS LIST
1	FRAME	20	MAIN SPINDLE INSERT
2	DRAG KNOB	21	LOCKING O-RING
3	DRAG KNOB INSERT	22	MAIN SPINDLE RETAINER
4	DRAG KNOB SCREW	23	SPINDLE HOLDER SCREW
5	COMPRESSION O-RING	24	SPOOL RETAINER
6	PUSH PLATE	25	SPINDLE O-RING
7	CLICKER(D/KNOB)	26	CLUTCH BEARING
8	CLICKER SPRING	27	FOOT
9	DOWEL PIN	28	FOOT SCREW
10	MAIN SHAFT NUT	29	DRAG WASHER
11	PRESSURE PLATE	30	DRAG COVER
12	DRAG WASHER	31	DRAG COVER SCREW
13	DRAG DISK	32	SPOOL
14	DRAG DISK BUSH	33	HANDLE SHAFT
15	CLICKER (SPINDLE)	34	HANDLE KNOB
16	CLICKER SPRING(S)	35	HANDLE WASHER
17	SLIDE WASHER	36	HANDLE SCREW
18	MAIN SHAFT	37	BALANCE
19	MAIN SPINDLE	38	BALANCE SCREW

## Changing from left hand retrieve to right hand retrieve.

1. Remove the spool retainer cap (24).
2. With a crosspoint screwdriver remove the screw (23) and the main spindle retainer (22).
3. Pull out the (19) main spindle.
4. On the main shaft is a one way bearing (26). Pull this bearing out, turn it over and put it back again.
5. Put the (19) main spindle on again.
6. Place the main spindle retainer (22) on the shaft end and secure it with the screw (23). **Make sure that the cams on the backside of the main spindle retainer engage the slots in the main shaft (18).**
7. Put back on the spool retainer cap (24).

### Reel maintenance


Rinse the reel after saltwater use.

Keep the reel clean.

Add waterproof grease/oil to your reel's moving parts (especially to the one way bearing, part 26) once a year.



DEEP 9/10 | DEEP 11/12  
OWNERS MANUAL

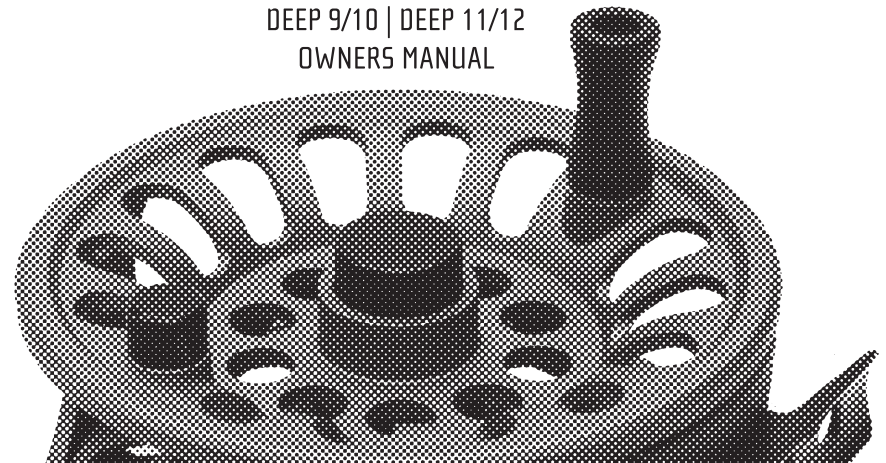

Vision Group Ltd  
Niinistökatu 1  
05800 Hyvinkää  
Finland

service@visiongroup.fi

For service centers visit:  
www.visionflyfishing.com