

NO	PARTS LIST	NO	PARTS LIST
1	FRAME	18	SLIDE WASHER
2	FOOT	19	MAIN SHAFT
3	FOOT SCREW	20	CLUTCH BEARING
4	DRAG KNOB	21	DRAG SPINDLE
5	DRAG KNOB SCREW	22	BUSHING
6	COMPRESSION O-RING	23	BALL BEARING 1
7	PUSH PLATE	24	RETAINING SCREW
8	CLICKER(D/KNOB)	25	SPOOL
9	CLICKER SPRING	26	SPOOL O-RING
10	PUSH BALL	27	SPOOL LOCK NUT
11	MAIN SHAFT NUT	28	LOCK NUT FLAT WASHER
12	PRESSURE PLATE	29	HANDLE SHAFT
13	DRAG WASHER	30	HANDLE KNOB
14	DRAG DISK	31	HANDLE WASHER
15	DRAG DISK BUSH	32	HANDLE SCREW
16	CLICKER (SPINDLE)	33	BALANCE
17	CLICKER SPRING(S)	34	BALANCE SCREW

Changing from left hand retrieve to right hand retrieve.

1. With a crosspoint screwdriver remove the screw (24).
2. Pull out the (21) drag spindle.
3. On the main shaft is a one way bearing (20). Pull this bearing out, turn it over and put it back again.
4. Put the (20) drag spindle on again.
5. Place the screw (24) back on its place and tighten it.


Reel maintenance

Rinse the reel after saltwater use.

Keep the reel clean.

Add waterproof grease/oil to your reel's moving parts (especially to the one way bearing, part 20) once a year.

NITE 56 | 78 | 11 OWNERS MANUAL

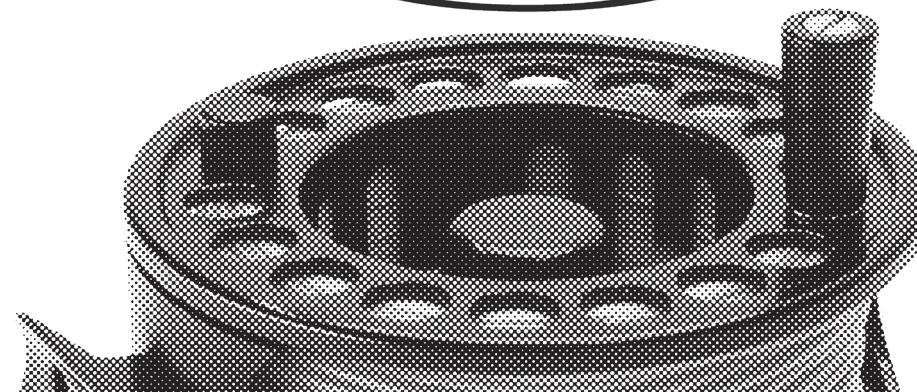

Vision Group Ltd
Niinistökatu 1
05800 Hyvinkää
Finland
358 (0)9 2797 610
service@visiongroup.fi

For service centers visit:
www.visionflyfishing.com